

Fob style transmitter FT-400

HOTRON

FT-400 is a remote control transmitter for automatic door activation using a 2.4GHz frequency. Please read this manual carefully for the safe and accurate use of this product



1. Product compositions and specifications

FT-400		
Component	FT-400 remote control (Transmitter)	1 EA
	Ø2.3 x 8 Round head Screw	1 EA
	Battery 1.5V Size AAA	1 EA
	User manual	1 EA
Specifications	Power supply	1.5V * 1 (Size AAA Battery)
	Transmitting frequency	2.4GHz
	Transmitting distance	Up to 10m (When installed in steel structures : Up to 2m)
	Power consumption	100mA under
	Operating temp	-20°C ~ 50°C
	Dimensions	36 x 79 x 16 (mm)


2. How to use



- ※ When Locked, only works with the FT-400 until it is unlocked.
- ※ In case of a power failure when locked, the locked condition will be maintained.
- ※ If you press the Lock button whilst the door is in Hold open mode, the door will close and lock.

3. Registering the FT-400 with WR-24 receiver


You can select one of the following two methods to register a transmitter/receiver (pairing).

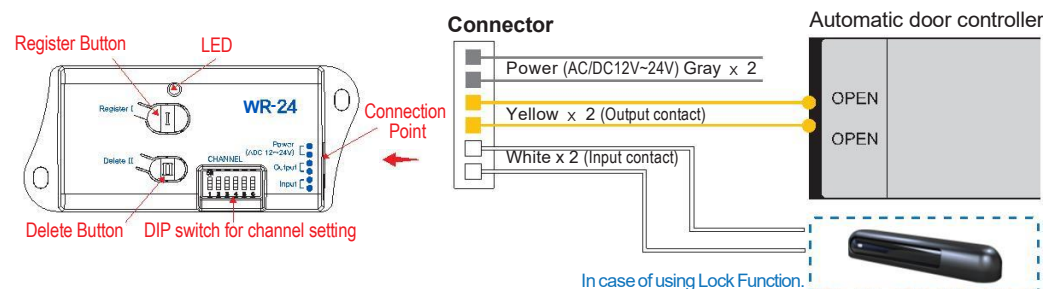

① Method 1: Registration using dip switches

Set the dip switches in the same sequence on both the FT-400 and WR-24 receiver while power is not connected.

 - ※ Pairing cannot be done if all DIP switches on both the FT-400 and WR-24 are in the OFF position.
- ※ An unlimited number of FT-400 transmitters can be registered with one WR-24 receiver.



Dip Switch

② Method 2: Registration using push buttons

Registration using push buttons should be done when the dip switches for the FT-400 and WR-24 are in OFF position.

- ※ Up to 10 FT-400 transmitters can be registered with one WR-24 receiver using this method.



Dip Switch

1. How to register a FT-400 with a WR-24 receiver

- Connect power to the WR-24 receiver.
- Press the button A on FT-400 whilst pressing the Register I button on WR-24 receiver.
- ● The red LED on the WR-24 receiver will flash to indicate that registration is complete.

2. How to delete a registered FT-400 from a WR-24 receiver

- Connect power to the WR-24 receiver.
- Press button B on FT-400 whilst pressing the Delete II button on WR-24 receiver.
- ● The green LED will flash when deletion is complete.

3. How to delete all registered FT-400 from a WR-24 receiver

- Press the Register I and Delete II buttons on WR-24 receiver for 5 seconds at the same time.
- The green LED will flash three times when all registered transmitters have been deleted.